

OptiHub 2

Quick Start Guide

1 PC Connection

Hub USB Uplinks should be divided among both Enhanced Host Controller Interfaces (EHCI) in your PC. Its best to use the USB ports on the back of your system. There should be two separate groups of USB ports, which could identify each EHCI. Plug two hubs into one EHCI and one hub into the other. See PC Back Panel diagram to the right.

2 OptiSync Mode (Diagram 1)


No RCA Sync Cables Required
(Wired Sync is Optionally Available)

All Optional Features Shown

- External Sync In/Out
- Active USB Extension

OptiSync Not Valid with Mixed Camera or Hub Configurations. Wired Sync Only.

Flex 13 cameras require an OptiHub 2 for full LED brightness and may not be mixed with Flex 3 cameras in OptiSync Mode.

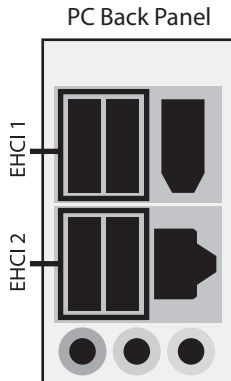

3 RCA Wired Sync Mode (Diagram 2)

All Optional Features Shown

- External Sync In/Out
- Active USB Extension

OptiSync Not Valid with Mixed Camera Configurations. Wired Sync Only.

Flex 13 cameras require to be connected to an OptiHub 2 for full LED brightness and may be mixed with Flex 3 cameras in RCA Wired Sync Mode.

Need help?

Call technical support at [1-888-965-0435](tel:1-888-965-0435) or e-mail us at support@optitrack.com.

Diagram 1. OptiHub 2 Network with 18x Flex 13 Cameras

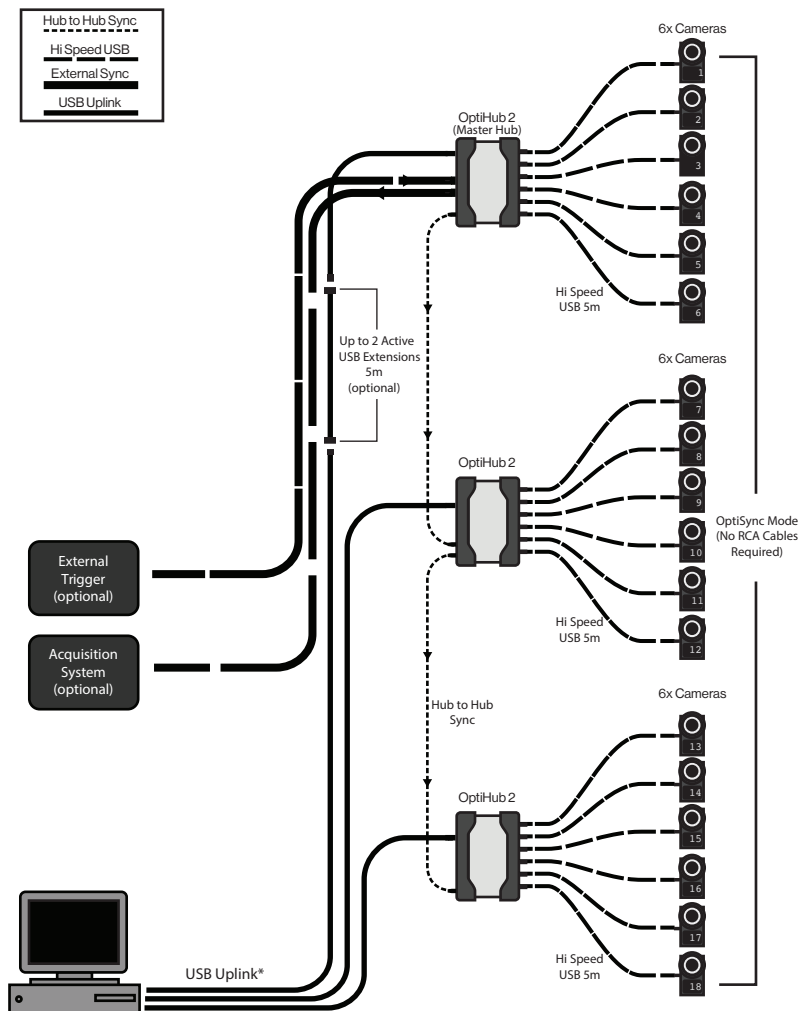


Diagram 2. OptiHub 2 Network with mixed Flex 3/13 Cameras

